



Olympus Twin Pack Service Manual

CONTENTS

PAGE

3	Daily checks.....	3-3
3.1	Daily safety checks.....	3-3
3.2	Warning labels.....	3-28



This page intentionally left blank



3 Daily checks

It is important that your machine is kept in good working order.

The following Daily Safety Checks must be carried out on a Dennis Eagle Ltd. Refuse Collection Vehicle to confirm the correct operation of the machine, its controls, safety circuits and interlocks, in addition to checks specified in the chassis-cab manufacturer's and waste container lifting device manufacturer's service information, before it commences service.

The same checks should also be carried out by service personnel whenever scheduled maintenance service procedures and inspections are carried out or after a minor or major repair has been made to the body.

Make sure that there is no mechanical damage or wear evident in the refuse mechanism, especially in the pivoting and locking of the tailgate to the body.

Any problems must be reported to supervision immediately.

3.1 Daily safety checks

1. Stand the vehicle on clean, level and stable ground with sufficient clearance to allow for the tailgate and waste container lifting device, if fitted, to be fully raised.
2. Engage the parking brakes.
3. Select Neutral 'N'.
4. Stop the engine.
5. Turn the 'Body main' switch to the off position. Remove and retain the key.






6. Switch the ignition off. Remove and retain the key.
7. Lock all cab doors. Remove and retain the keys.
8. Walk around the Refuse Collection Vehicle and:
 - Make sure that there is no refuse, paper or flammable materials near the engine or exhaust. These could cause a fire when the engine is started. If necessary, tilt the cab (See Chassis-cab Manufacturer's Operator's Handbook) to make a thorough inspection.



DAILY CHECKS

3

- Visually check level of oil in hydraulic oil tank. The float in the bottom sight glass should be at the top of the sight glass. If the level is below this report to supervision immediately and do not proceed any further with the daily inspection.

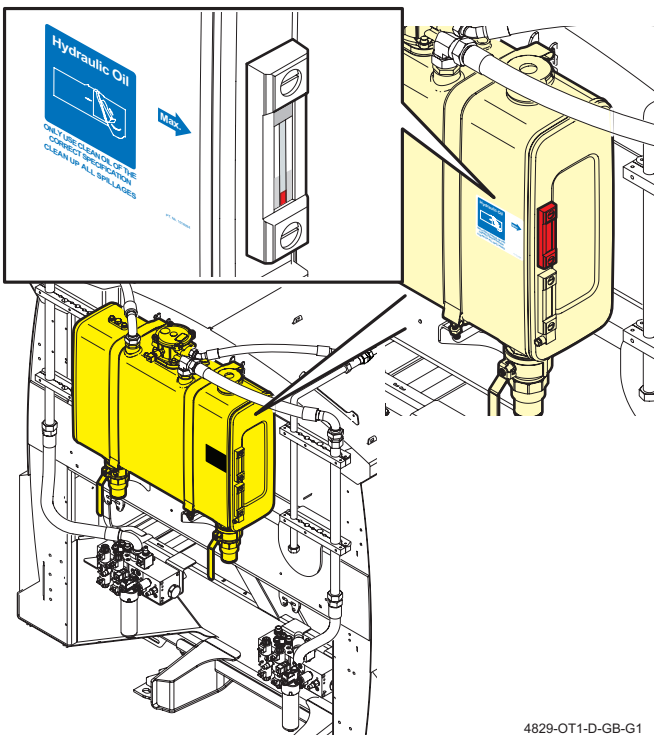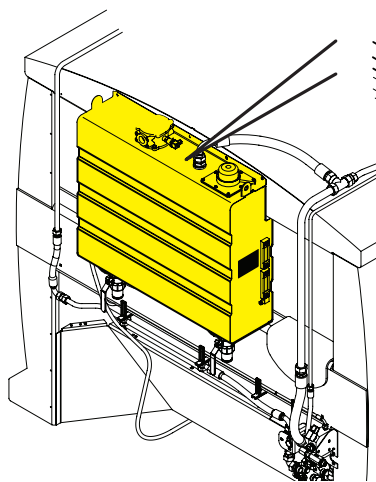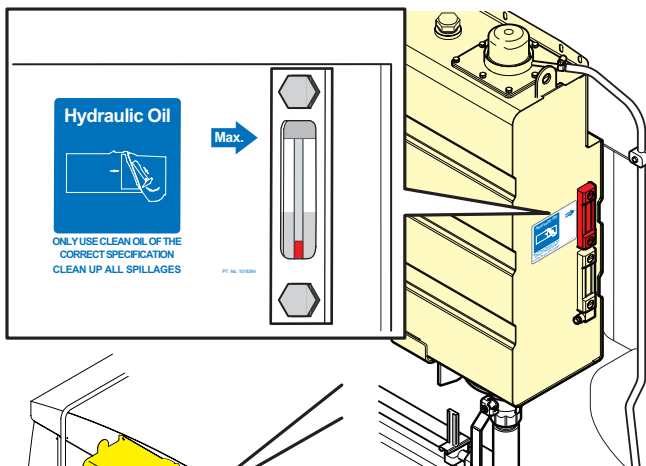


4829-OT1-D-GB-G1

- Visually check for obvious damage to lamps, warning beacons, reflectors and lenses and bodywork.
 - Check that all marking plates and warning instruction labels are complete, clean, clearly visible and readable (see '3.2 Warning labels' on page 3-28).
 - Visually check underneath (BUT DO NOT GO UNDERNEATH THE VEHICLE) the Refuse Collection Vehicle for evidence of hydraulic oil leaks from the body system hydraulic pipes.
 - Visually check the electrical harnesses and connections, hoses, pipes and other components for obvious signs of defects.
9. Arrange for an assistant to observe the operation of body systems and lamps from a safe viewpoint at the rear of the vehicle.
 10. Enter the Refuse Collection Vehicle cab.
 11. Check that all the emergency tools, equipment and fire extinguisher are present.
 12. Check that the first aid kit is complete.





13. Switch the ignition on only, do not start the engine.

- The control screen should initialise and then display the 'Body system off' mode.

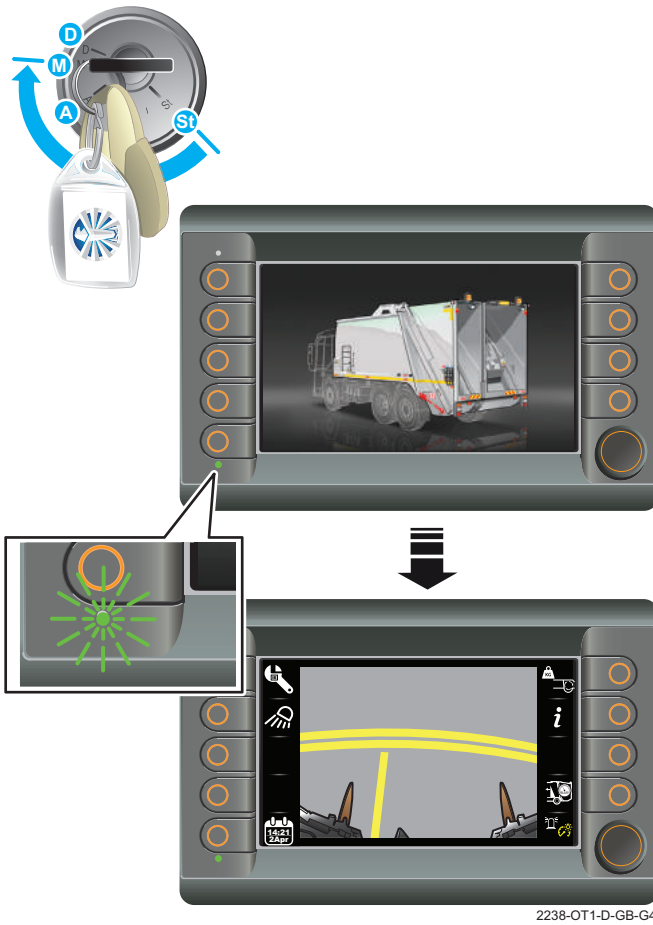

16. Switch on the warning beacons.

- Check that the warning beacons and their associated warning lamps operate correctly when switched on and extinguish when switched off.

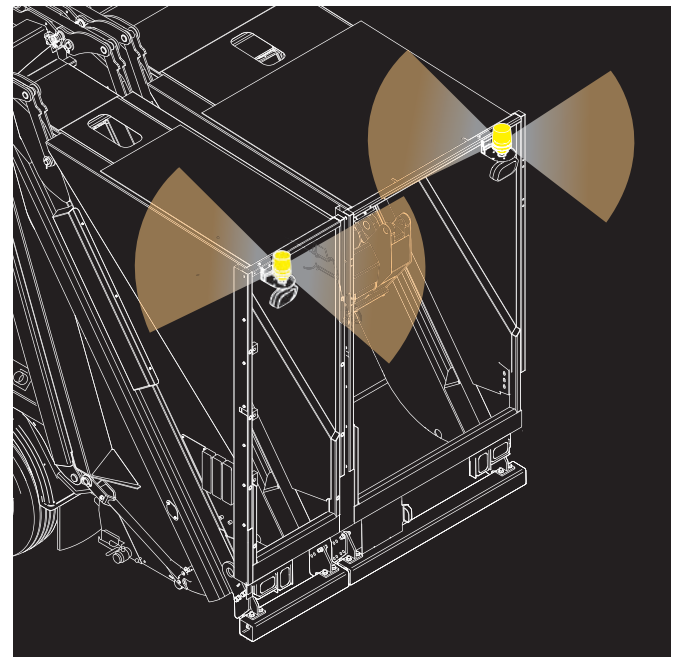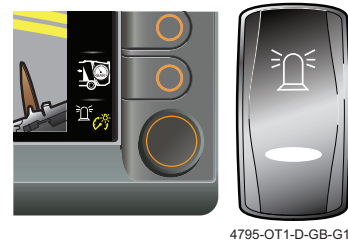

14. Switch on all the vehicle lamps, including fog lamps (if fitted).

- Check that the lamps and their associated warning lamps illuminate when switched on and extinguish when switched off.

15. Operate the footbrake.

- Check that all the brake lamps illuminate when the pedal is pressed and extinguish when the pedal is released.



DAILY CHECKS

17. Make sure that the parking brake is applied and Neutral 'N' is selected.
18. Start the engine, check the warning panels and instrumentation for any indications of system malfunctions.
 - The 'Low air pressure' warning buzzers should not be sounding.
19. Turn the 'Body main' switch on.



- The screen should display the 'Body system run' mode.



2578-OT1-D-GB-G3


- If any warning pictograms are displayed on the screen, report to supervision immediately and do not proceed any further with the daily inspection.




20. Press and release the 'Work lamp' switch.




- Check that the tailgate loading lamps and all the work lamps fitted to the vehicle illuminate.

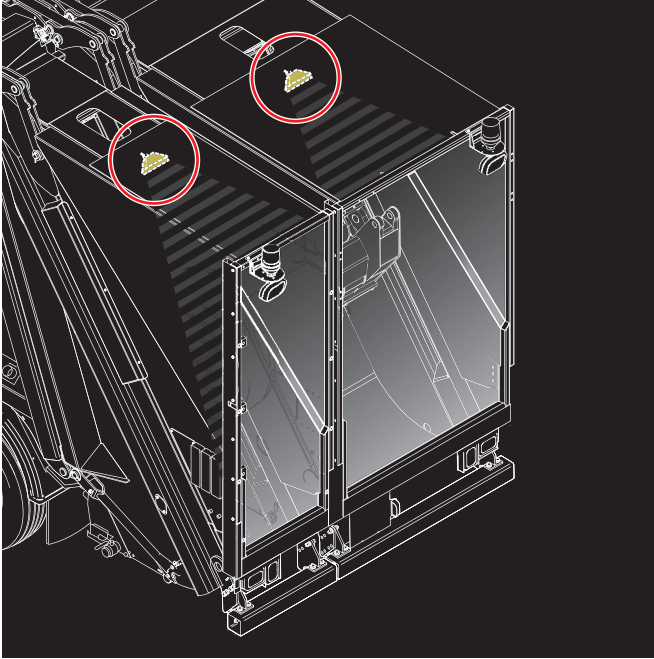

2251-OT1-D-GB-G2

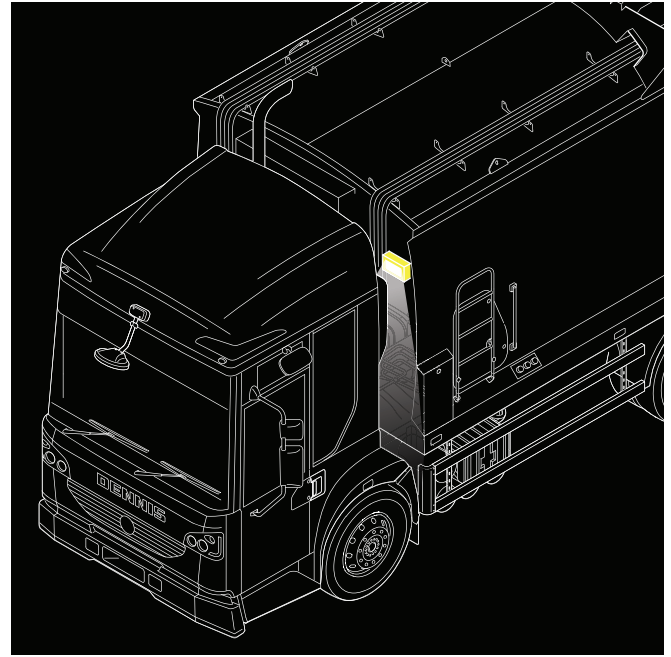

2253-OT1-D-GB-G3

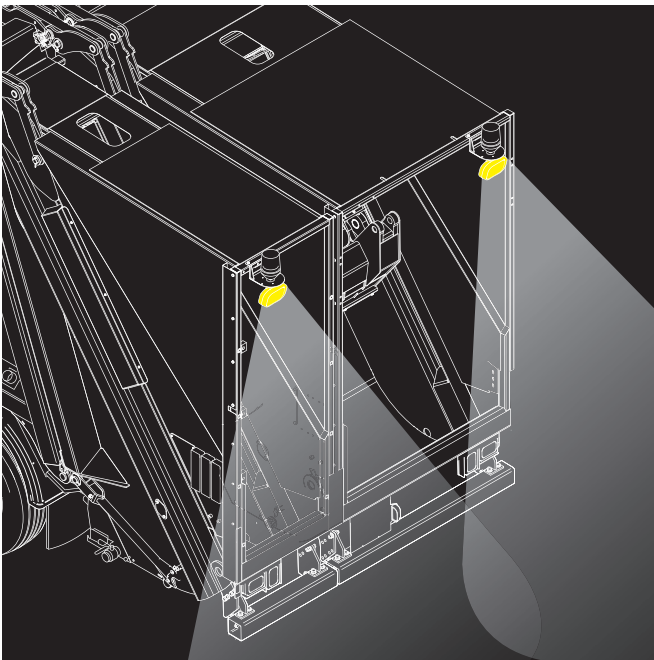

2384-OT1-D-GB-G2




DAILY CHECKS

For each body in turn, carry out operations 21 - 50.

21. Turn the 'Body selector' switch to select the required body, left-hand or right-hand.




2243-OT1-D-GB-G2

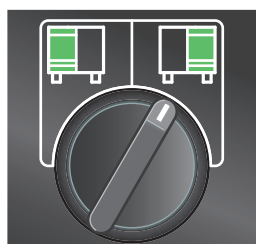

2244-OT1-D-GB-G2

22. Press and release the 'Internal discharge controls' switch.

- The screen should display the 'Body discharge internal controls' mode.


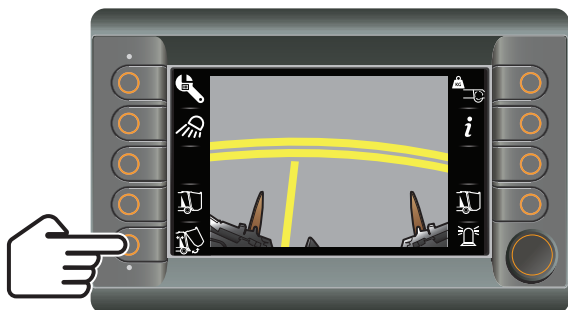


2354-OT1-D-GB-G4

23. Check that 'Tailgate clear' pictogram at the bottom left hand corner is green.

If it is white:

- Press and release the switch beside it and check that the pictogram changes colour to green.
- Report fact to supervision.

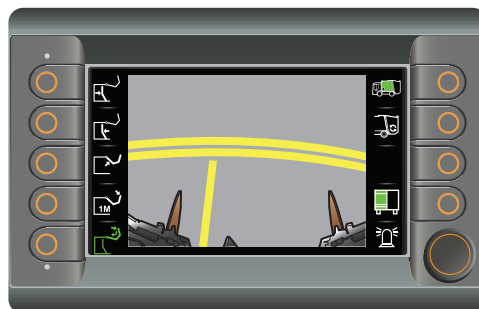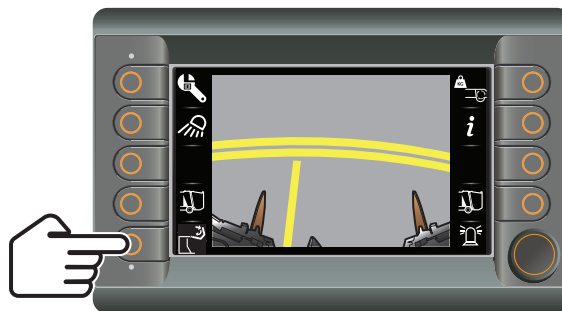

2438-OT1-D-GB-G3



WARNING:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND WASTE CONTAINER LIFTING DEVICE, IF FITTED, RAISED.




24. Press and hold the 'Tailgate raise' switch until the tailgate is just out of its locks and then release the switch.

- Tailgate should raise smoothly until it is out of the locks.
- 'Vehicle reversing' alarm should sound immediately the tailgate is out of the locks while the 'Tailgate raise' switch is being pressed and the tailgate is rising



2440-OT1-D-GB-G3

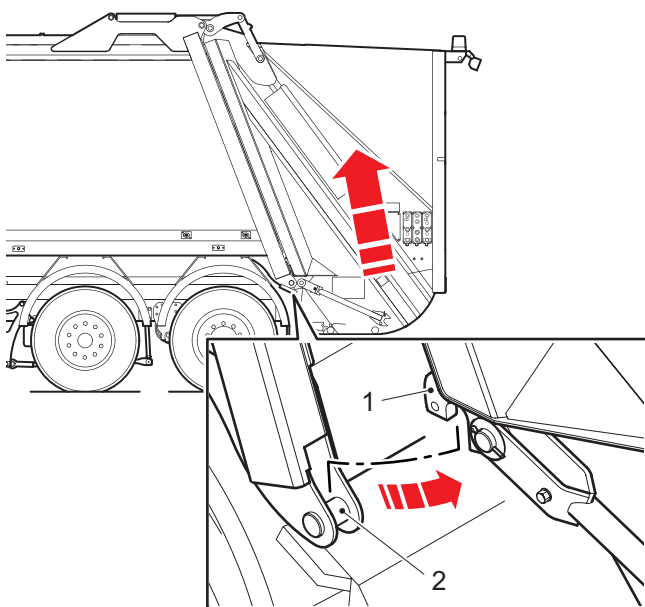

2439-OT1-D-GB-G3

- 'Tailgate out-of-locks' pictogram should display on the control panel screen when 'Tailgate raise' switch is released.



WARNINGS:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND WASTE CONTAINER LIFTING DEVICE, IF FITTED, RAISED.

DRIVER MUST BE IN CAB.

PARKING BRAKE MUST BE APPLIED.

ALL PERSONNEL MUST BE CLEAR OF FRONT AND REAR OF VEHICLE.

VEHICLE MAY LURCH FORWARDS.

25. Firmly apply the footbrake. Then select Drive 'D'.

- 'Tailgate out-of-locks' warning buzzer in the cab should sound immediately Drive 'D' is selected.

26. Select Neutral 'N'.

- 'Tailgate out-of-locks' warning buzzer in the cab should silence immediately Neutral 'N' is selected.



DAILY CHECKS

3


27. Press and release the 'Body system run controls' switch.

- The screen should display the 'Body system run' mode with 'Tailgate out-of locks' pictogram.



2441-OT1-D-GB-G3

29. On each de-energised 'Start pack cycle' push-button, press and release the 'Start pack cycle' push-button to activate it.

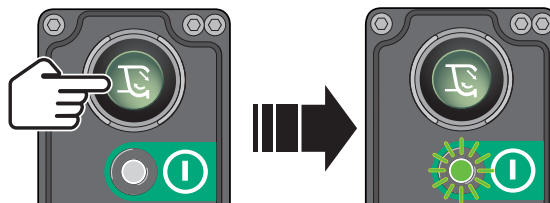

- The green indicator lamp should illuminate.

30. Press in turn the:



Start pack cycle push-button.



Rescue push-button.

2442-OT1-D-GB-G1

- Compaction mechanism should not operate.



WARNING:
COMPACTION MECHANISM MAY OPERATE.
MAKE SURE THAT THE TAILGATE AREA IS
CLEAR OF PERSONNEL.

28. On each energised 'Start pack cycle' push-button, press in turn the:



Start pack cycle push-button.




Rescue push-button.

2442-OT1-D-GB-G1

- Compaction mechanism should not operate.



31. Press and release the 'Internal discharge controls' switch.
- The screen should display the 'Body discharge internal controls' mode and 'Tailgate-out-of-locks' pictogram.

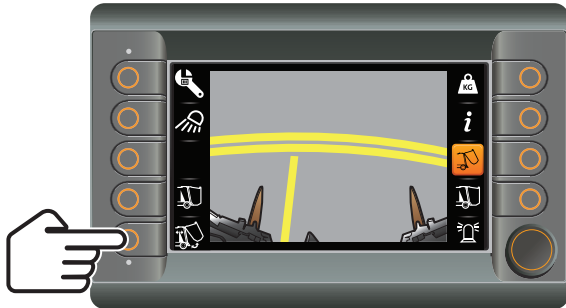

2443-OT1-D-GB-G3



WARNING:
COMPACTION MECHANISM MAY OPERATE.
MAKE SURE THAT THE TAILGATE AREA IS CLEAR OF PERSONNEL.

32. On each compaction mechanism control panel, press in turn the:



Start pack cycle push-button.



Rescue push-button.



2442-OT1-D-GB-G1

- Compaction mechanism should not operate.



WARNING:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND WASTE CONTAINER LIFTING DEVICE, IF FITTED, RAISED.

33. Press and hold the 'Tailgate raise' switch.

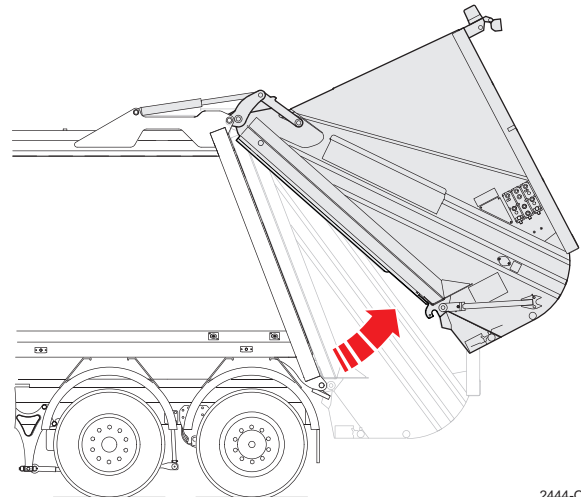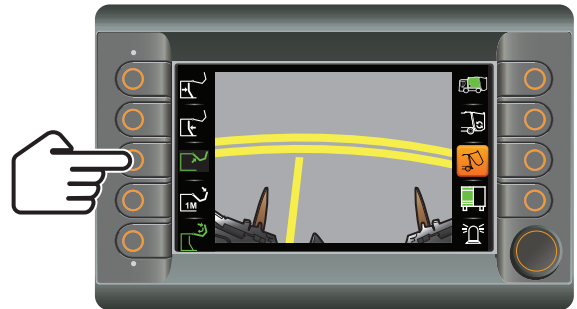

2444-OT1-D-GB-G3

- Tailgate should rotate smoothly upwards about the hinge pins.
- 'Vehicle reversing' alarm should sound.



DAILY CHECKS

3


34. While tailgate is rising, release the 'Tailgate raise' switch before it reaches its fully raised position.

- Tailgate should stop rising immediately the switch is released.
- Tailgate should not lower.
- 'Tailgate out-of-locks' pictogram should display on the control panel screen.



2440-OT1-D-GB-G3



- When the tailgate is raised, the 'Tailgate fully raised' pictogram should display on the control panel screen.

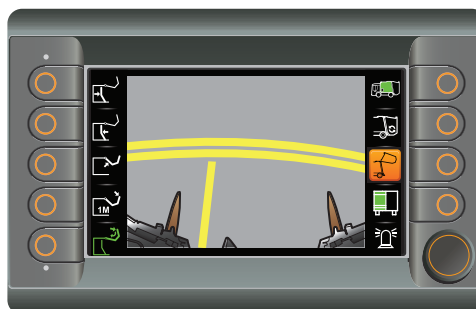

2575-OT1-D-GB-G3

- 'Vehicle reversing' alarm should silence.

35. Press and hold the 'Tailgate raise' switch until the tailgate is fully raised and then release the switch.

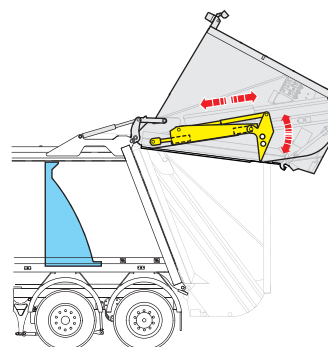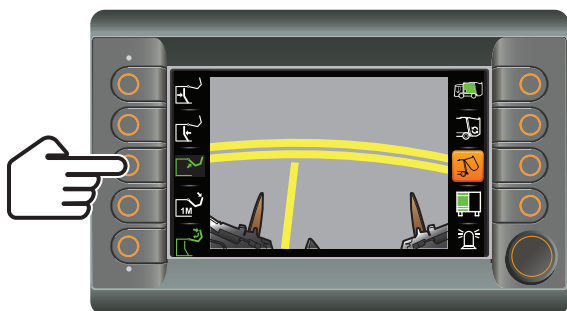

2446-OT1-D-GB-G2

- Immediately the tailgate reaches full height, the compaction mechanism should complete one full cycle, i.e. packer plate open, carriage plate down, packer plate close and then carriage plate up in one continuous sequence until fully packed when it should stop.




WARNINGS:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND WASTE CONTAINER LIFTING DEVICE, IF FITTED, RAISED.

DRIVER MUST BE IN CAB.

PARKING BRAKE MUST BE APPLIED.

ALL PERSONNEL MUST BE CLEAR OF FRONT AND REAR OF VEHICLE.

VEHICLE MAY LURCH FORWARDS.

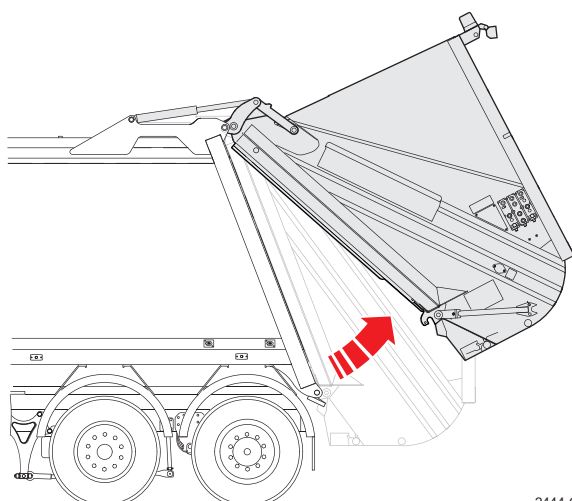


2444-OT1-D-GB-G3

- Tailgate should resume rotating upwards about the hinge pins until fully raised when it should stop without noticeable judder.
- 'Vehicle reversing' alarm should sound while 'Tailgate raise' switch is being pressed and the tailgate is rising.




36. Firmly apply the footbrake. Then select Drive 'D'.
 - 'Tailgate out-of-locks' warning buzzer in the cab should sound immediately Drive 'D' is selected.
37. Select Neutral 'N'.
 - 'Tailgate out-of-locks' warning buzzer in the cab should silence immediately Neutral 'N' is selected.
38. Press the 'Eject' switch. Release the switch when the ejection plate has reached the end of its travel.


39. Press the 'Retract' switch. Release the switch when the ejection plate has reached the end of its travel.

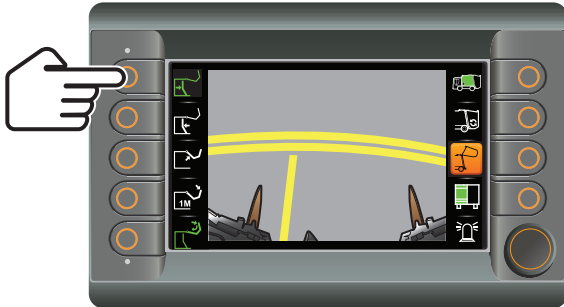


2447-OT1-D-GB-G3

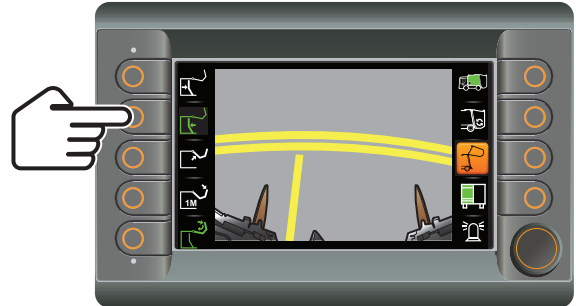

2449-OT1-D-GB-G3

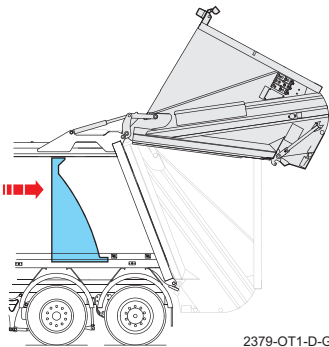

2379-OT1-D-GB-G2

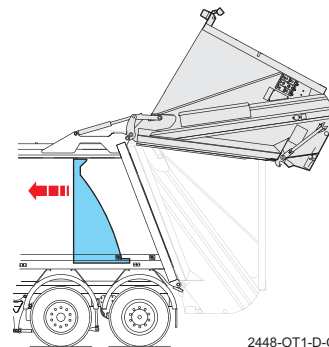

2448-OT1-D-GB-G1

- Ejection plate should eject smoothly without judder.


- Ejection plate should retract smoothly without judder.




DAILY CHECKS

3

40. Press the 'Eject' switch. Release the switch when the ejection plate has reached the end of its travel.

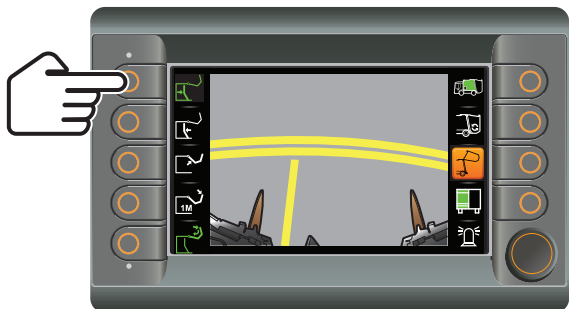


2447-OT1-D-GB-G3

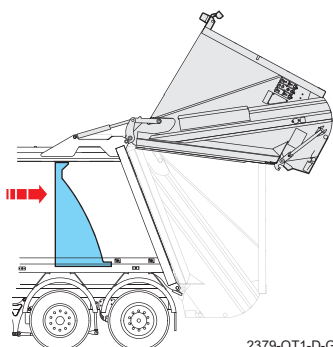

2379-OT1-D-GB-G2

42. Press the two push-buttons on the 'Tailgate lowering' control panel simultaneously.

- Tailgate should lower smoothly without judder.

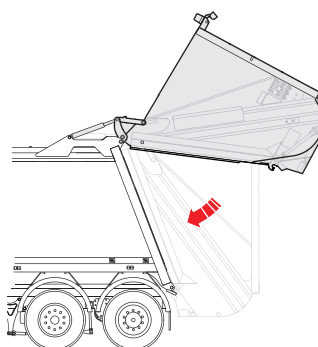


2451-OT1-D-GB-G2

- 'Vehicle reversing' alarm should sound.
- The engine speed should lower to tick-over.



WARNING:
MAKE SURE THAT THE TAILGATE AREA IS CLEAR OF PERSONNEL.

41. Press each of the two push-buttons on the 'Tailgate lowering' control panel separately.

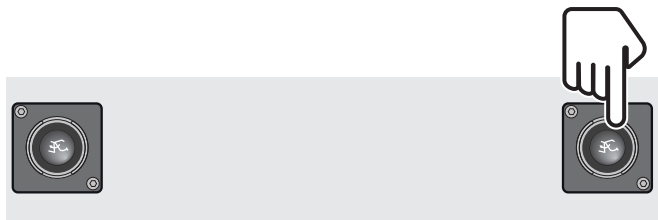


2450-OT1-D-GB-G1

- Tailgate should not lower.




43. While tailgate is lowering, release one of the push-buttons but keep the other push-button depressed.

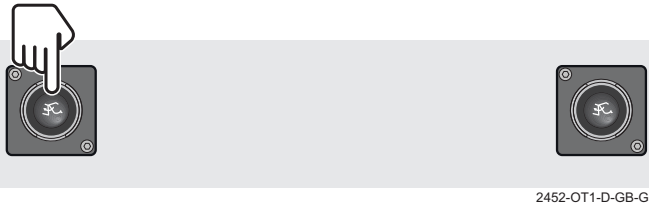

2452-OT1-D-GB-G1

- Tailgate should stop lowering immediately the push-button is released.
- Tailgate should not lower.
- 'Tailgate out-of-locks' pictogram should display on the control panel screen.

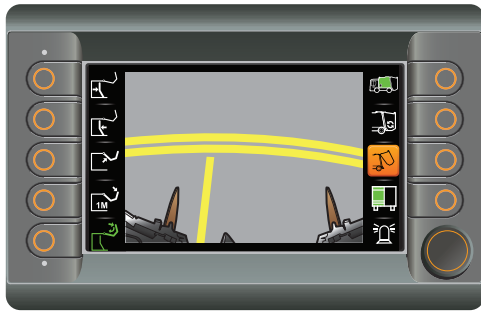

2440-OT1-D-GB-G3


- 'Vehicle reversing' alarm should silence.

44. While keeping the push-button depressed, press the released push-button again.

- Tailgate should remain stationary.
- 'Tailgate out-of-locks' pictogram should continue to display on the control panel screen.

Release both push-buttons.


45. Press the two push-buttons on the 'Tailgate lowering' control panel simultaneously until the tailgate engages locks and then release the push-buttons.

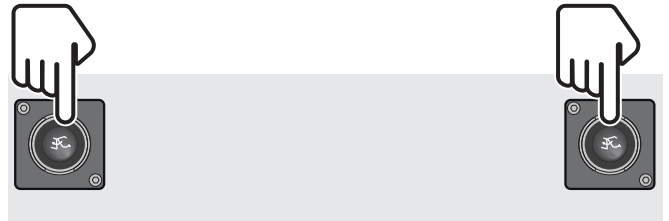

2387-OT1-D-GB-G1

- Tailgate should rotate smoothly downwards about the hinge pins until it engages face of body, then lower into locks.
- 'Vehicle reversing' alarm should sound until the tailgate engages locks when it should silence.


46. Check that the 'Tailgate clear' pictogram in the bottom left-hand corner of the screen is green.

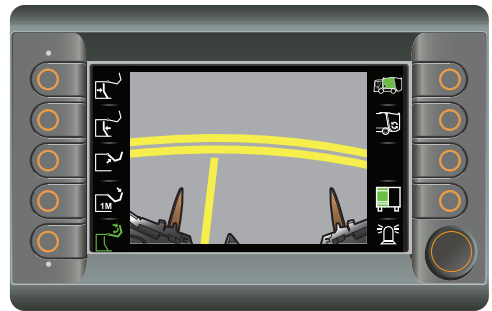

2453-OT1-D-GB-G3

47. Press and release the 'Tailgate clear' switch.

- Check that the pictogram changes to white.

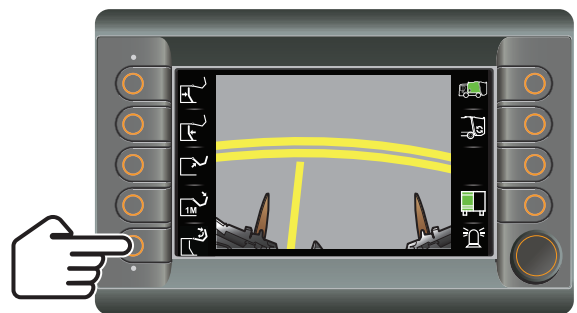



2454-OT1-D-GB-G3



DAILY CHECKS

3



48. Press and hold the 'Tailgate raise' switch until the tailgate is fully raised and then release the switch.

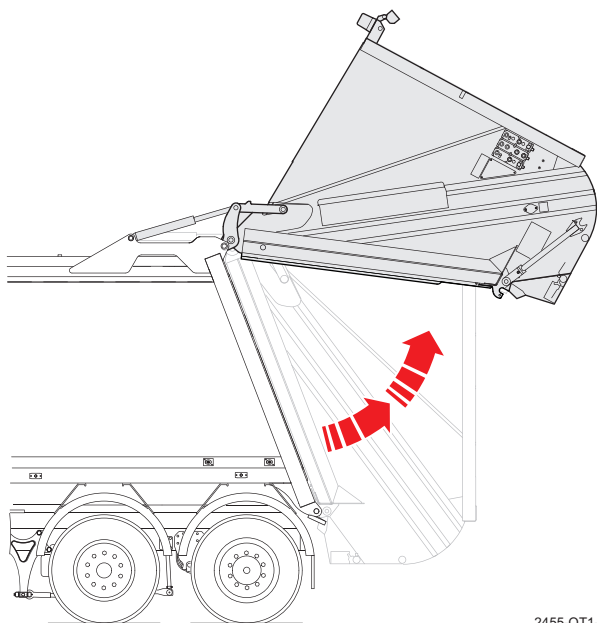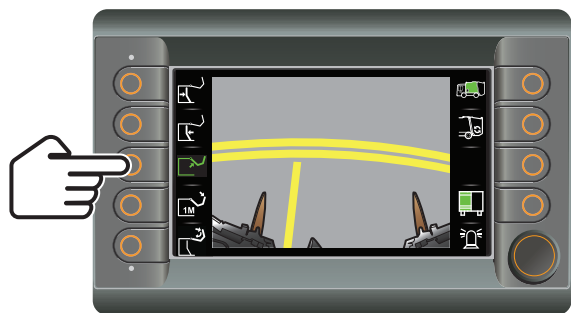

2455-OT1-D-GB-G3

- Tailgate should raise until fully raised when it should stop without noticeable judder.
- 'Vehicle reversing' alarm should sound while tailgate is rising.
- Immediately the tailgate reaches full height, the compaction mechanism should not operate.

49. Press and hold 'Lower tailgate to 1 metre' switch until the tailgate stops lowering and then release the button.

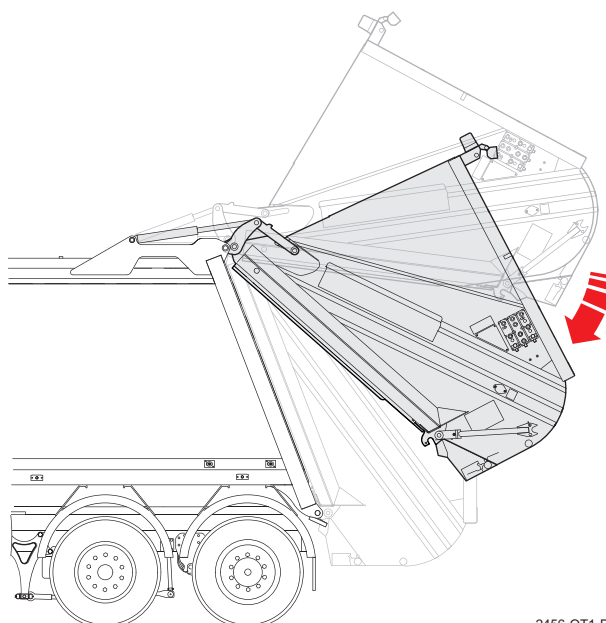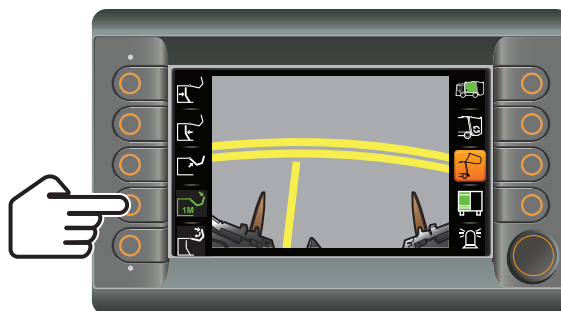

2456-OT1-D-GB-G3


- Tailgate should rotate smoothly downwards about the hinge pins until it is 1 metre from the body when it should stop without noticeable judder.
- 'Vehicle reversing' alarm should sound while tailgate is lowering.
- 'Tailgate out-of-locks' pictogram should display on the control panel screen.



2457-OT1-D-GB-G3



50. Press the two push-buttons on the 'Tailgate lowering' control panel simultaneously until the tailgate engages locks and then release the push-buttons.

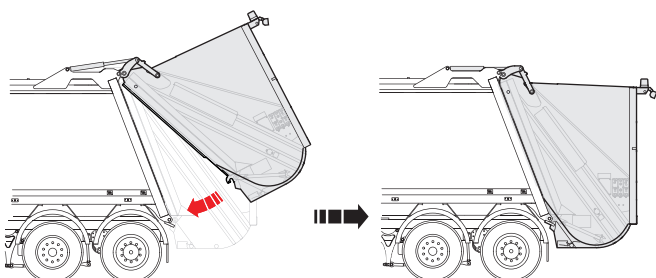

2458-OT1-D-GB-G2

- Tailgate should rotate smoothly downwards about the hinge pins until it engages face of body, then lower into locks.
- 'Vehicle reversing' alarm should sound until the tailgate engages locks when it should silence.

51. Press and release the 'Body system run controls' switch.



2459-OT1-D-GB-G3

- The screen should display the 'Body system run' mode.



**WARNINGS:
DRIVER MUST BE IN CAB.**

PARKING BRAKE MUST BE APPLIED.

**ALL PERSONNEL MUST BE CLEAR OF
FRONT AND REAR OF VEHICLE.**

VEHICLE MAY LURCH FORWARDS.


52. Firmly apply the footbrake. Then select Drive 'D'.




DAILY CHECKS

3

53. Assistant to press 'Start pack cycle' push-button on each compaction mechanism control panel.

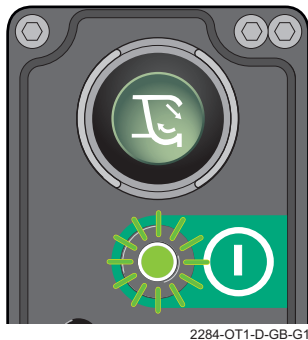

- Compaction mechanism packer plate should open (1), carriage plate and packer plate should move downwards (2), packer plate should close (3), carriage plate and packer plate should move upwards (4) and automatically stop in the packed position.

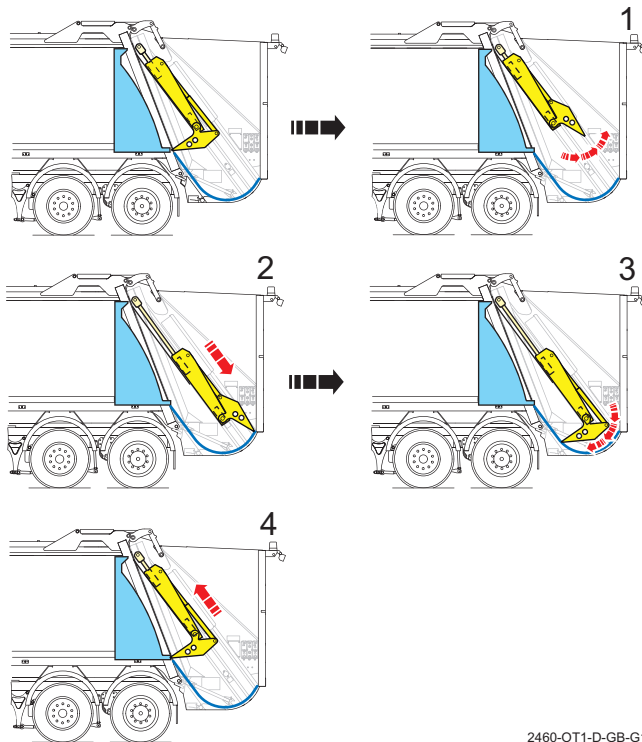

2460-OT1-D-GB-G1

- Compaction mechanism should not operate.

54. Select Neutral.

For each compaction mechanism control panel, carry out the following operations (55 - 60):


55. Check that pack cycle operates correctly according to variant.

Vehicles fitted with a closed waste container lifting device.

Vehicles fitted with an open waste container lifting device and guide plate in raised position.

Vehicles fitted with an open waste container lifting device and a fixed extended rave rail.

Energise each 'Start pack cycle' push-button in turn and then press and release the 'Start pack cycle' push-button.

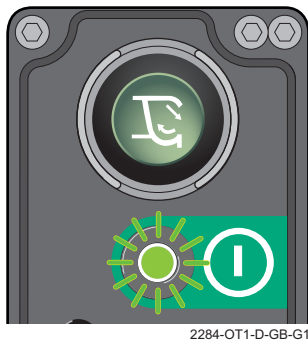

2284-OT1-D-GB-G1

- Green LED below push-button should be illuminated.





Open System vehicles (no waste container lifting device fitted).

Vehicles fitted with an open waste container lifting device and guide plate in lowered position.



56. Press and release the 'Start pack cycle' push-button.

- Packer plate should open and then stop.

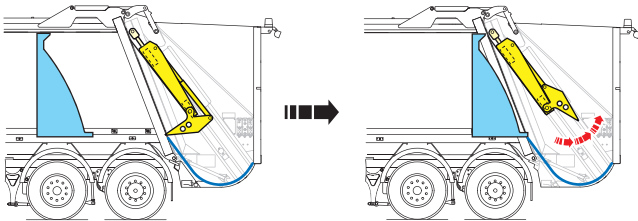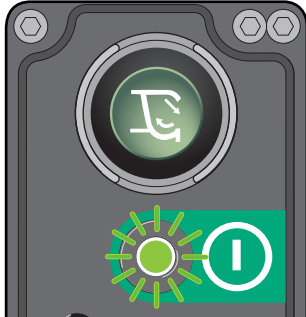

2461-OT1-D-GB-G1

57. Press and hold the 'Start pack cycle' push-button.

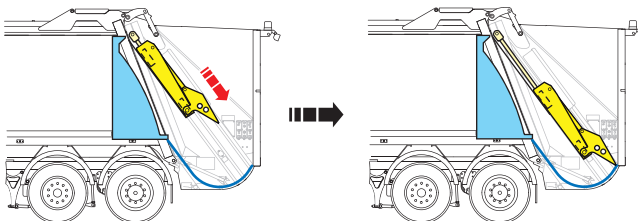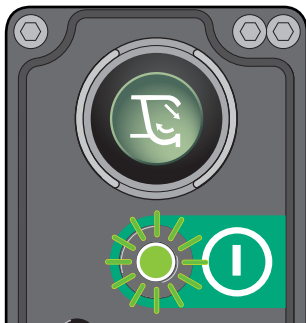

2462-OT1-D-GB-G1

- Carriage plate and packer plate should move downwards.

Release the push-button while the carriage plate and packer plate are moving downwards.

- Carriage plate and packer plate should stop immediately.

58. Press and hold the 'Start pack cycle' push-button again.


- Carriage plate and packer plate should continue to move downwards from stopped position and stop when carriage plate fully lowered.

59. Press and hold the 'Start pack cycle' push-button again.

- The packer plate should close.

Release the push-button after the packer plate has started to close.

- Packer plate should automatically close and then the carriage plate and packer plate should move upwards until the compaction mechanism is fully packed when it should stop.

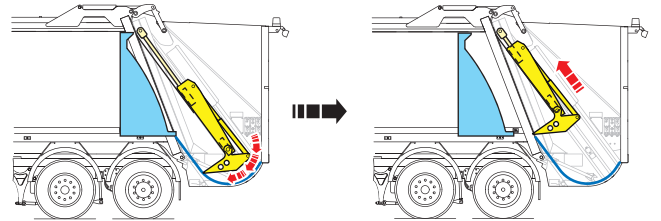

2576-OT1-D-GB-G1




DAILY CHECKS

3


60. Press and release the 'Signal' push-button.

- 'Tailgate signal' buzzer in the cab should sound immediately the push-button is pressed and silence immediately the push-button is released.

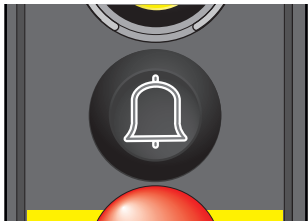

2278-OT1-D-GB-G1


- The 'Signal' warning pictogram should display on the control panel screen while the button is pressed.

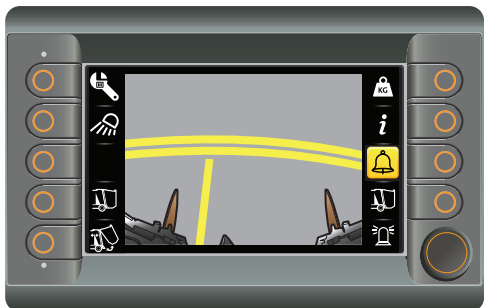

2464-OT1-D-GB-G3

For each 'Emergency stop' push-button:


- Cab control panel (x 1)
- Compaction mechanism control panel (x 2)
- Rave rail or lifting device (x 2)

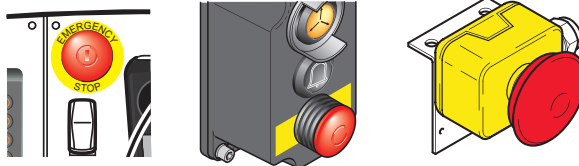

3887-OT1-D-GB-G2


Carry out the following operations (61 - 68):

61. Press a 'Start pack cycle' push-button, to operate the compaction mechanism so that carriage plate is moving upwards.

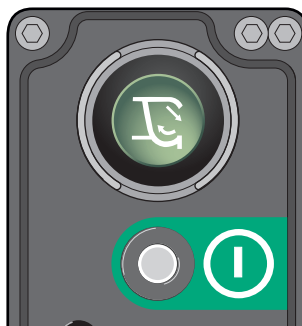

2280-OT1-D-GB-G1

While the carriage plate is moving upwards, press the 'Emergency stop' push-button.

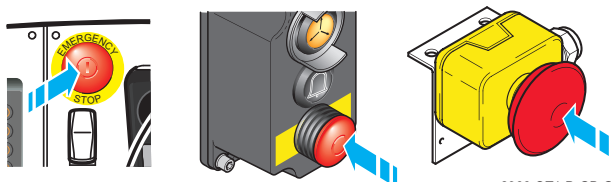

2366-OT1-D-GB-G3

- Compaction mechanism should stop immediately.
- 'Emergency stop' warning buzzer in the cab should sound.
- 'Emergency stop operated' pictogram should display in the control panel screen.




2465-OT1-D-GB-G3




62. On each compaction mechanism control panel, press in turn the:

'Start pack cycle' push-button.

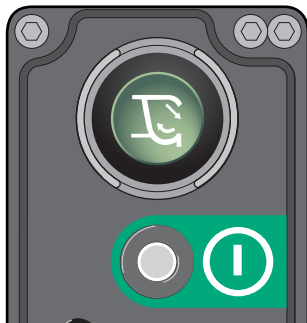

2280-OT1-D-GB-G1


- Compaction mechanism **should not operate.**
- 'Signal' push-button.

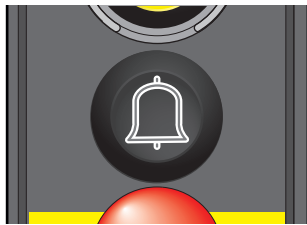

2278-OT1-D-GB-G1


- 'Tailgate signal' buzzer in the cab **should not sound.**

'Rescue' push-button.

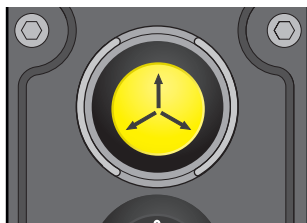


2279-OT1-D-GB-G1

- Packer plate should open and carriage plate move upwards simultaneously until it is fully open and fully unpacked.

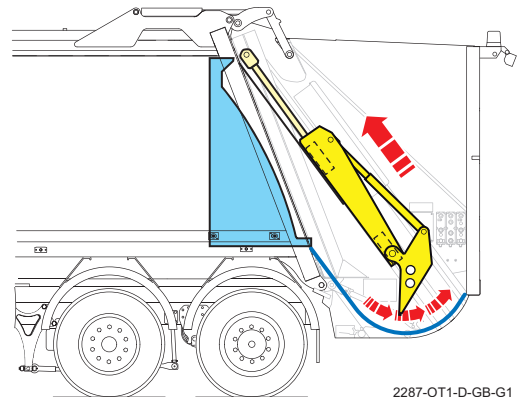


2287-OT1-D-GB-G1

- The 'Rescue' warning pictogram should display on the control panel screen.

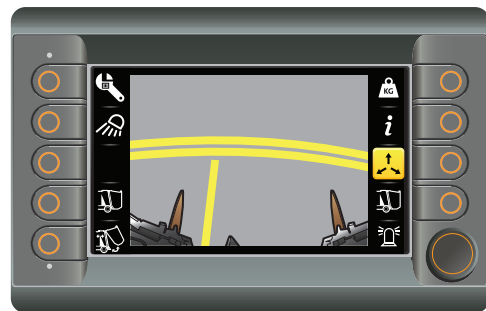


2467-OT1-D-GB-G3

63. Turn the 'Body main' switch off and then on again.

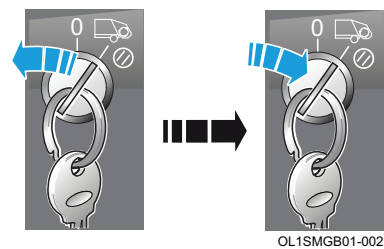

OL1SMGB01-002

64. Pull the 'Emergency stop' push-button outwards.

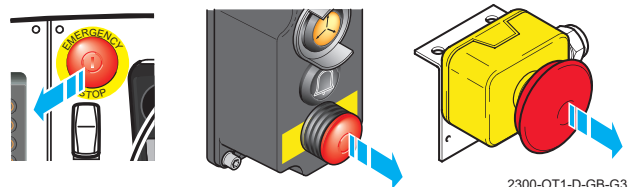

2300-OT1-D-GB-G3


- 'Emergency stop' warning buzzer in the cab should silence.



DAILY CHECKS

3


65. Press the 'Start pack cycle' push-button.

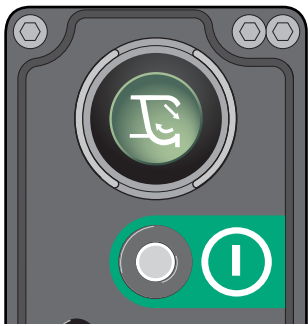

2280-OT1-D-GB-G1


- Compaction mechanism **should not operate**.

66. Turn the 'Body main' switch off and then on again.

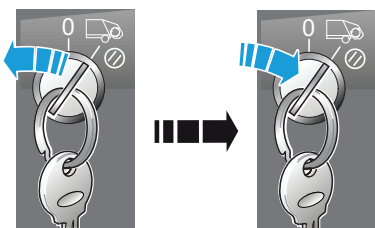

OL1SMGB01-002

67. Press the 'Start pack cycle' push-button.

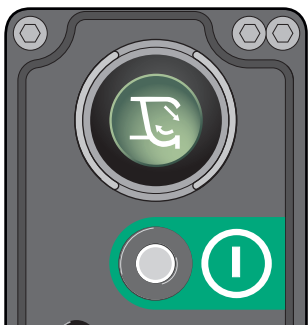

2280-OT1-D-GB-G1

- Check that the compaction mechanism restarts and operates to specification.

68. Turn the 'Body main' switch to off position. Remove and retain the key.



69. Open the left-hand body access door.

70. Insert the key into the 'Body main' switch and turn it to run.




- 'Body access door open' warning pictogram should display in the control panel screen.



2468-OT1-D-GB-G3

71. On each compaction mechanism control panel, press in turn the:

'Start pack cycle' push-button twice.

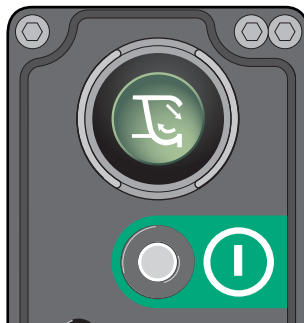

2280-OT1-D-GB-G1

'Rescue' push-button.




2279-OT1-D-GB-G1

- Compaction mechanism **should not operate**.



72. Press and release the 'Internal discharge controls' switch.
- The screen should display the 'Body discharge internal controls' mode.
 - 'Body access door open' pictogram should continue to display on the control panel screen.

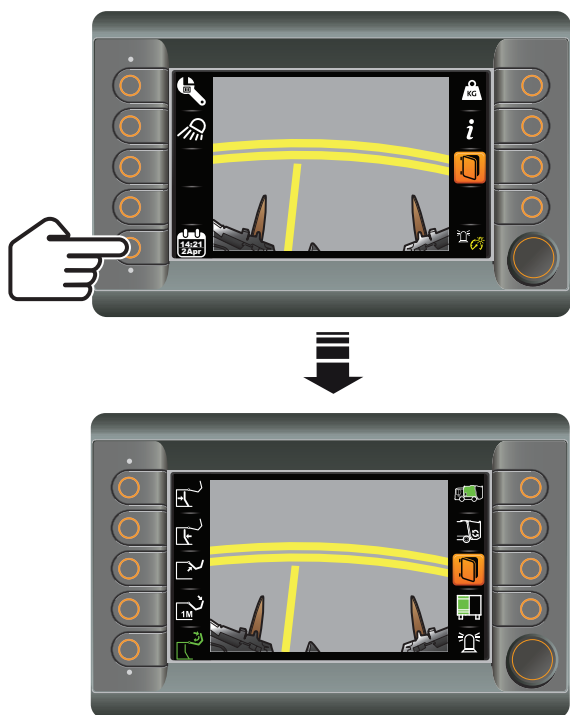

2469-OT1-D-GB-G3






WARNING:
COMPACTION MECHANISM MAY OPERATE.
MAKE SURE THAT THE TAILGATE AREA IS
CLEAR OF PERSONNEL.



WARNING:
MAKE SURE THAT YOU KNOW THE HEIGHT
OF YOUR VEHICLE WITH THE TAILGATE
AND WASTE CONTAINER LIFTING DEVICE,
IF FITTED, RAISED.

73. Press and hold in turn the 'Tailgate raise', 'Ejection plate eject' and 'Ejection plate retract' switches.
- Tailgate raise, ejection plate eject and ejection plate retract functions should not operate.

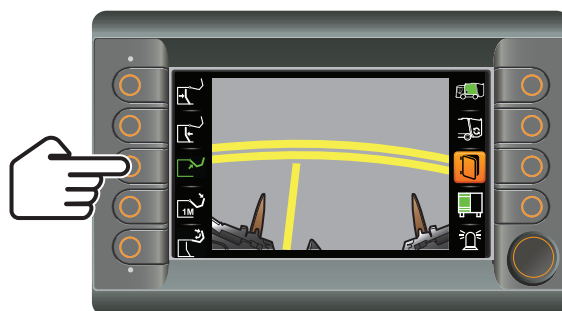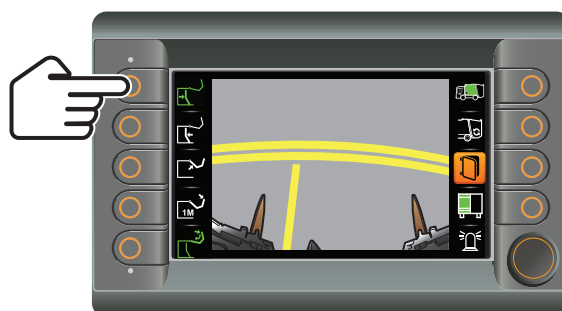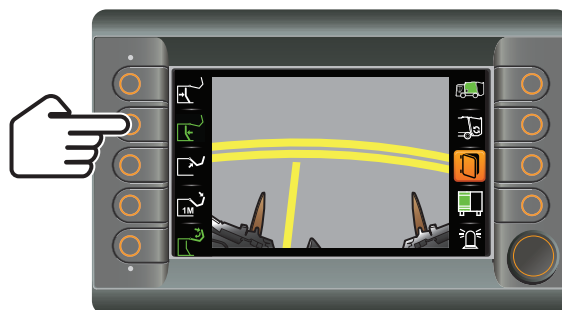

2470-OT1-D-GB-G3



DAILY CHECKS

- 74. Turn the 'Body main' switch to off position. Remove and retain the key.




- 75. Close and lock the left-hand body access door.
- 76. Open the right-hand body access door.
- 77. Repeat operations 70-75 with the right-hand body access door open.
- 78. Insert the key into the 'Body main' switch and turn it to run.




On vehicles fitted with an external discharge control panel carry out the following operations (79-89):

- 79. Turn the 'Body selector' switch to select the required body, left-hand or right-hand.

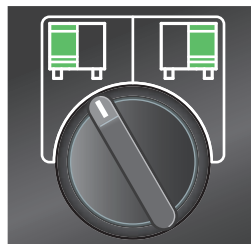

2243-OT1-D-GB-G2

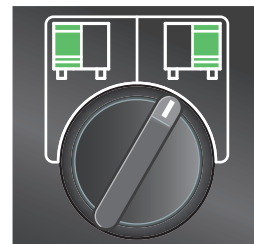

2244-OT1-D-GB-G2

- 80. Press and release the 'Internal discharge controls' switch.
 - The screen should display the 'Body discharge internal controls' mode.



2354-OT1-D-GB-G4



81. Press and release the 'External discharge controls' switch.

- The screen should display the 'Body discharge external controls' mode.





2357-OT1-D-GB-G3



WARNING:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND WASTE CONTAINER LIFTING DEVICE, IF FITTED, RAISED.

82. Press the 'Tailgate raise' push-button.

- Tailgate should raise smoothly until out-of-locks and then rotate smoothly upwards about the hinge pins.
- 'Vehicle reversing' alarm should sound immediately the tailgate is out-of-locks and while tailgate is rising.

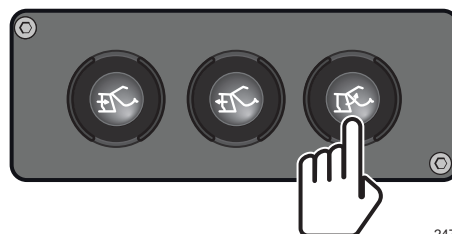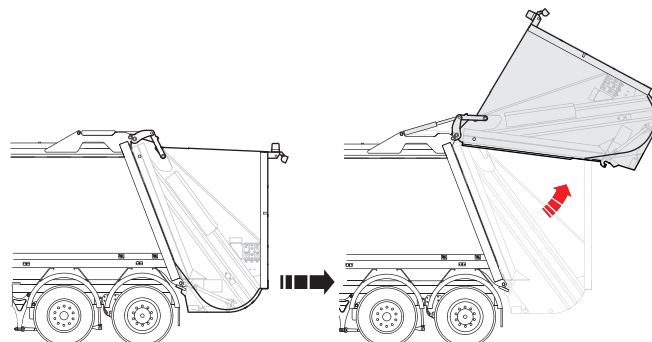

2471-OT1-D-GB-G2

- 'Tailgate out-of-locks' pictogram should display on the control panel screen.



2472-OT1-D-GB-G3



DAILY CHECKS

3

83. While tailgate is rising, release push-button before it reaches its fully raised position.



- Tailgate should stop rising immediately the switch is released.
- Tailgate should not lower.
- 'Tailgate out-of-locks' pictogram should continue to display on the control panel screen.



2472-OT1-D-GB-G3

84. Press the 'Tailgate raise' push-button until the tailgate is fully raised and then release the push-button.

- Check that the tailgate resumes rotating upwards about the hinge pins until fully raised when it should stop without noticeable judder.
- 'Vehicle reversing' alarm should sound while 'Tailgate raise' push-button is pressed and tailgate is rising.

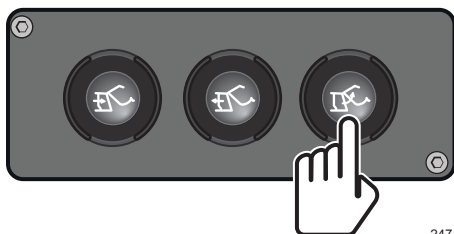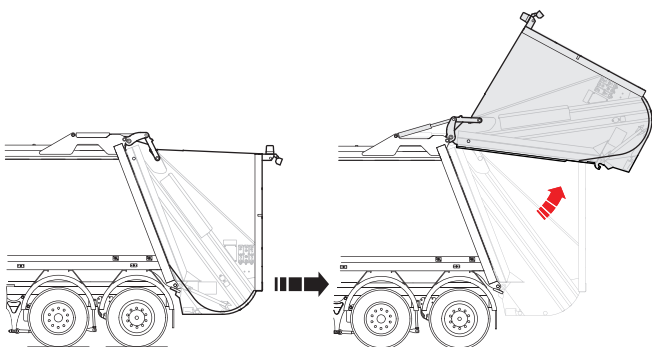

2471-OT1-D-GB-G2



85. When the tailgate is raised, the 'Tailgate fully raised' pictogram should display on the control panel screen.



2473-OT1-D-GB-G3

86. Press the 'Ejection plate eject' push-button. Release the push-button when the ejection plate has reached the end of its travel.

- Ejection plate should eject smoothly without judder.

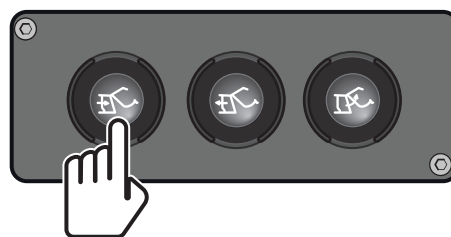
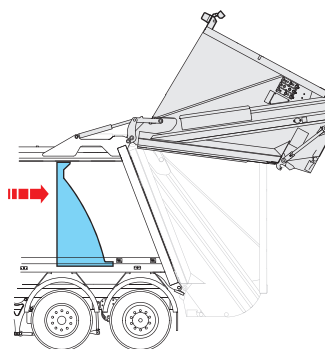


2474-OT1-D-GB-G1



87. Press the 'Ejection plate retract' push-button. Release the push-button when the ejection plate has reached the end of its travel.



- Ejection plate should retract smoothly without judder.

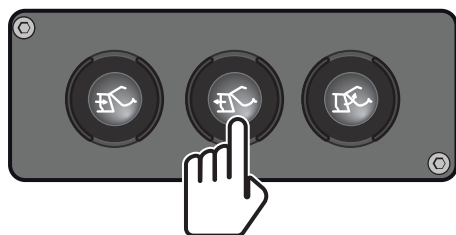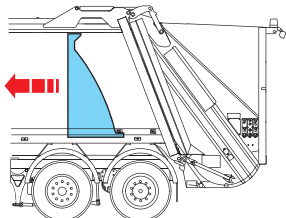

2475-OT1-D-GB-G2

88. Press the 'Ejection plate eject' push-button. Release the push-button when the ejection plate has reached the end of its travel.


- Ejection plate should eject smoothly without judder.

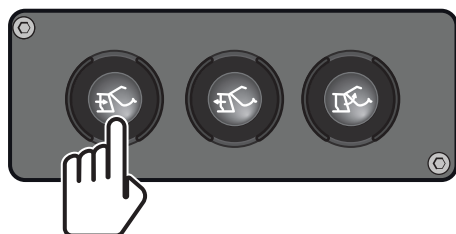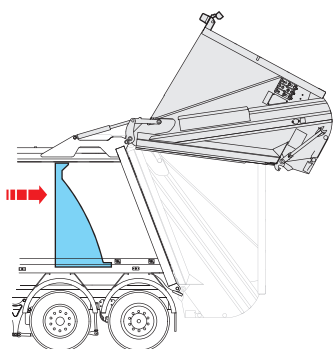

2474-OT1-D-GB-G1

89. Press the two push-buttons on the 'Tailgate lowering' control panel simultaneously until the tailgate engages locks and then release the push-buttons.

- Tailgate should rotate smoothly downwards about the hinge pins until it engages face of body, then lower into locks.

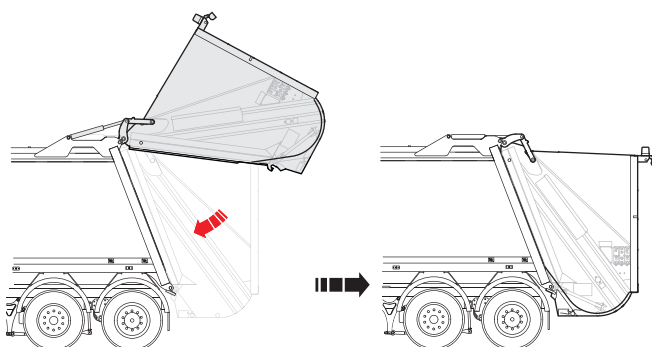

2597-OT1-D-GB-G2

- 'Vehicle reversing' alarm should sound until the tailgate engages locks when it should silence.
- The engine speed should lower to tick-over.

90. Check level of oil in hydraulic oil tank and top up if required (see '4.1 To check hydraulic system oil level' on page 4-3).




WARNING:
MAKE SURE THAT THE TAILGATE AREA IS CLEAR OF PERSONNEL.



DAILY CHECKS


3.2 Warning labels

3

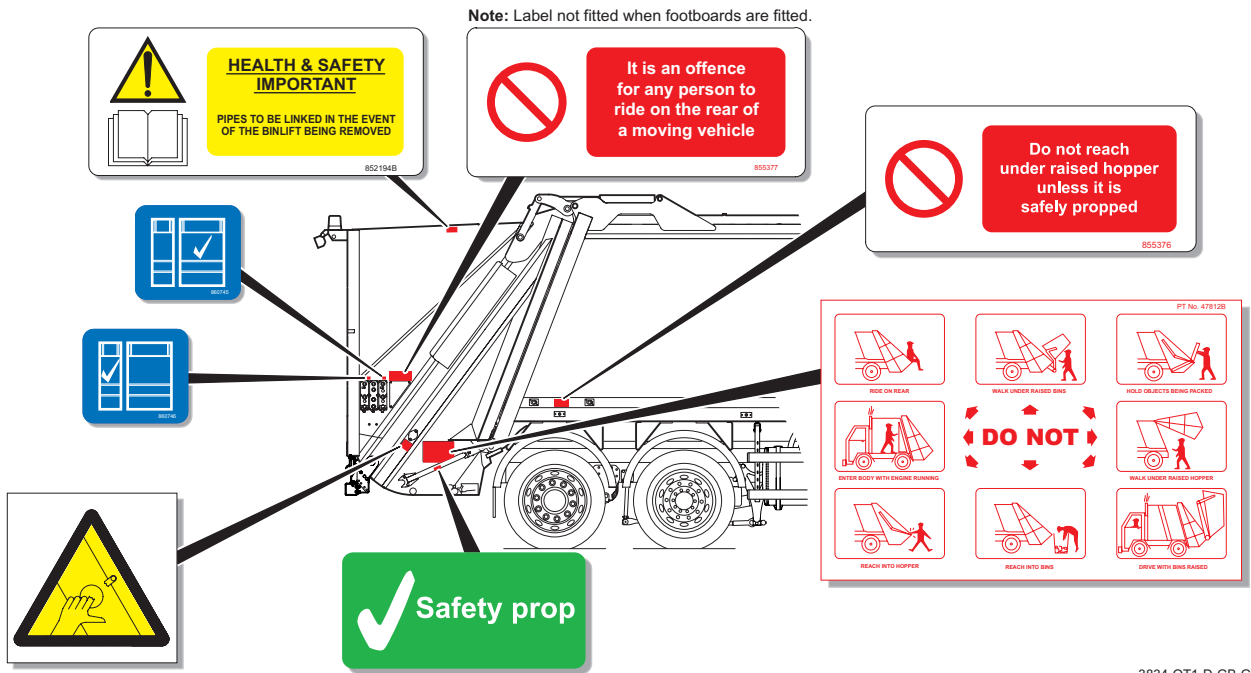

3834-OT1-D-GB-G2

Fig. 3-1 Warning labels; right-hand rear of refuse collection bodywork

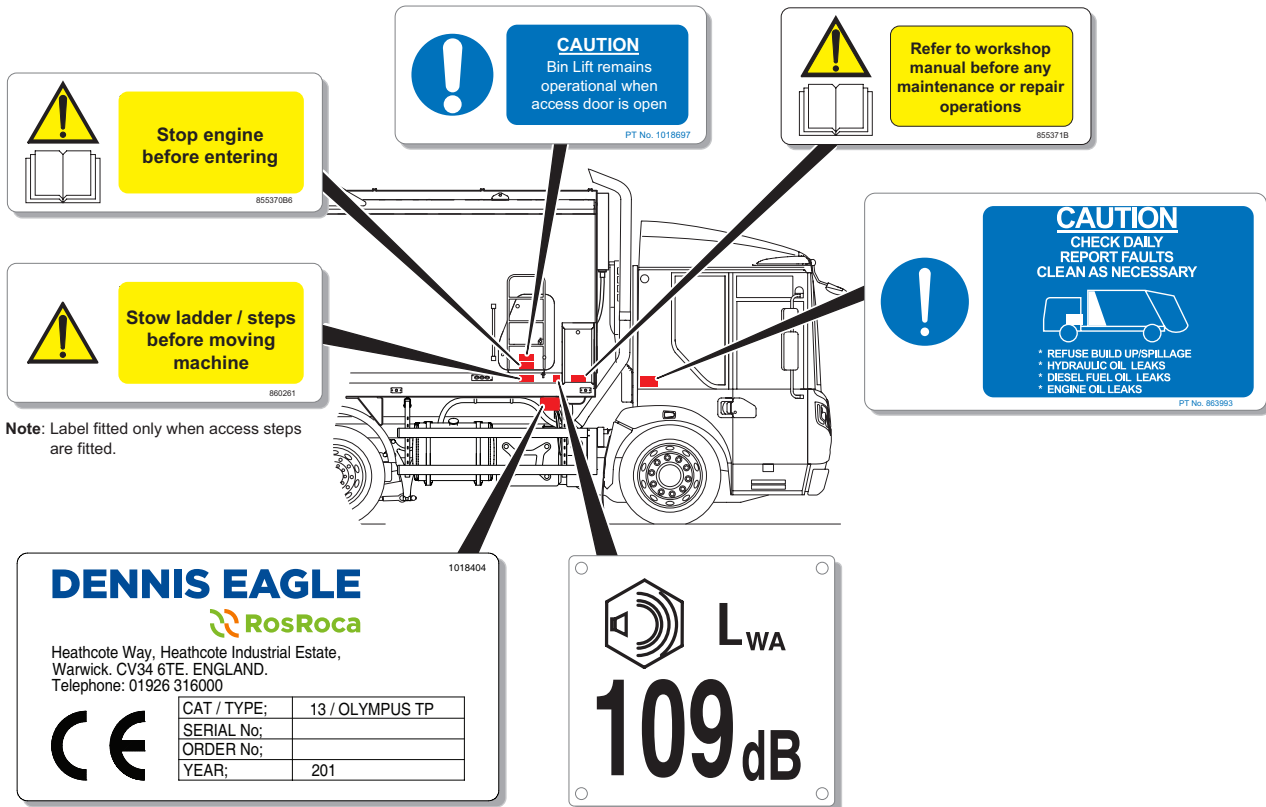

3835-OT1-D-GB-G2

Fig. 3-2 Warning labels; right-hand front of refuse collection bodywork

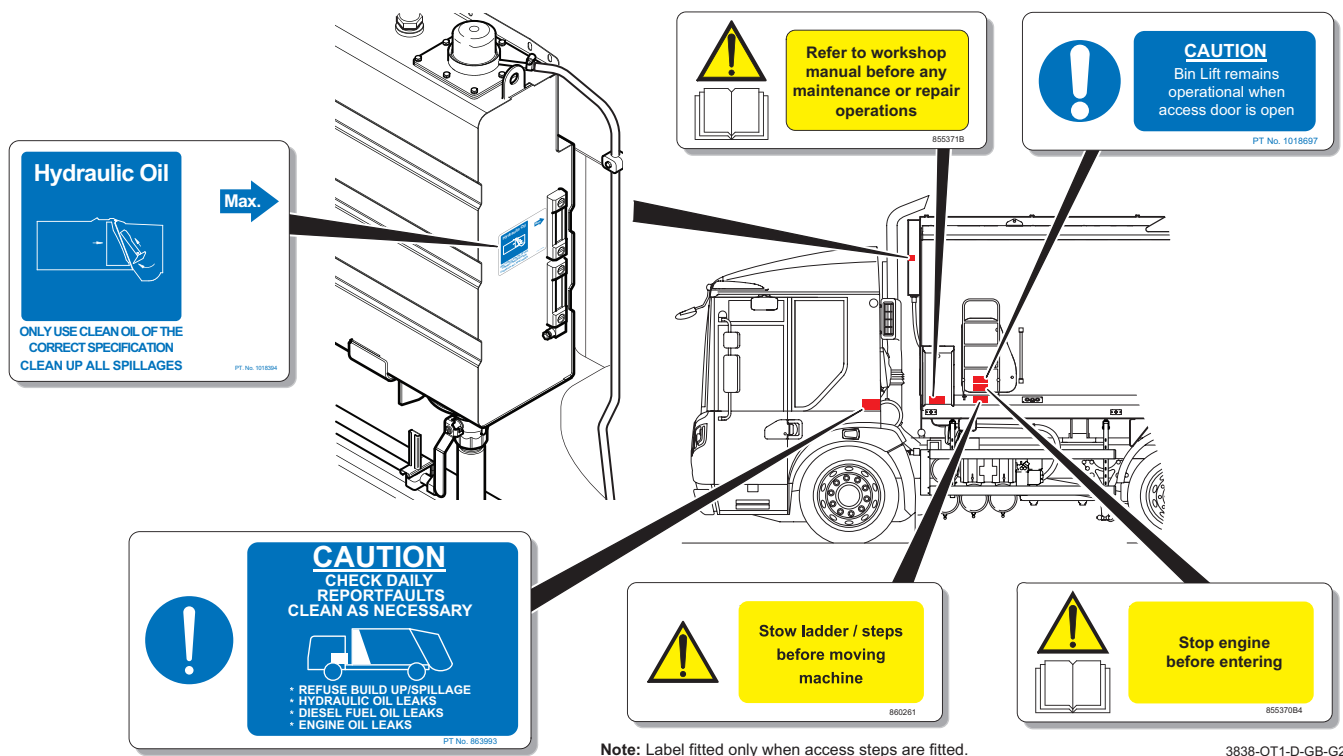


Fig. 3-3 Warning labels; left-hand front of refuse collection bodywork



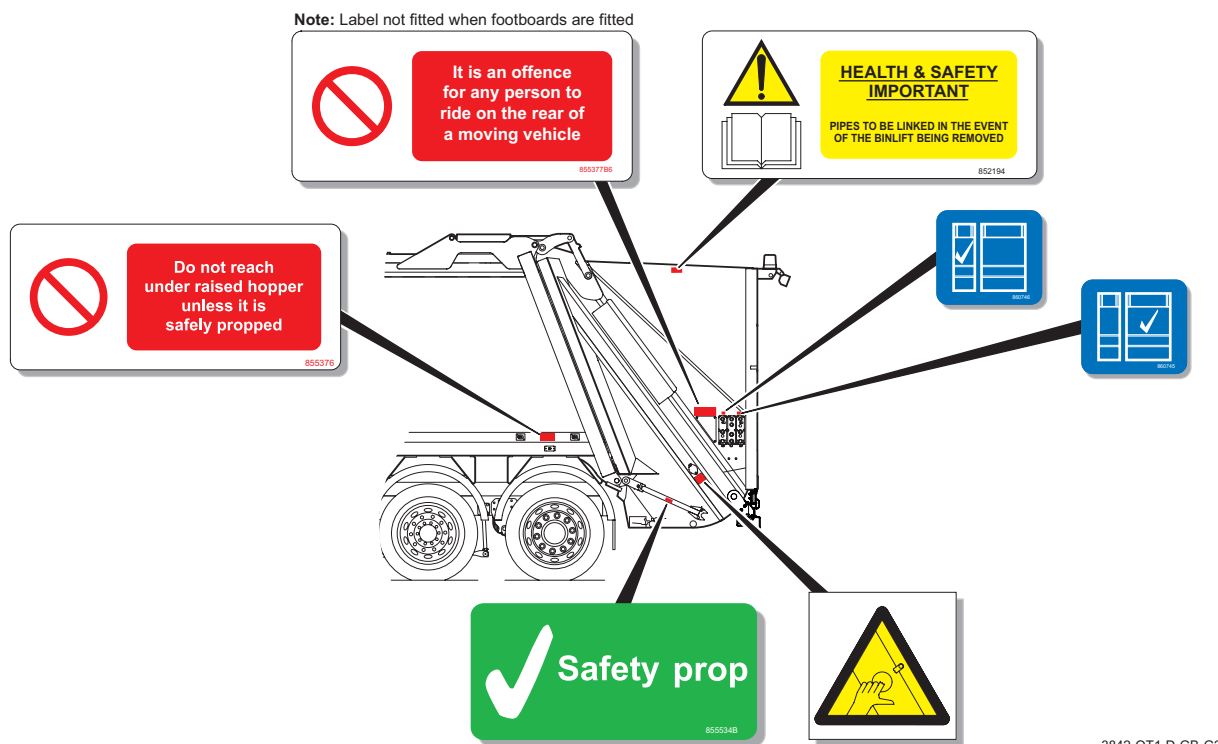


Fig. 3-4 Warning labels; left-hand rear of refuse collection bodywork

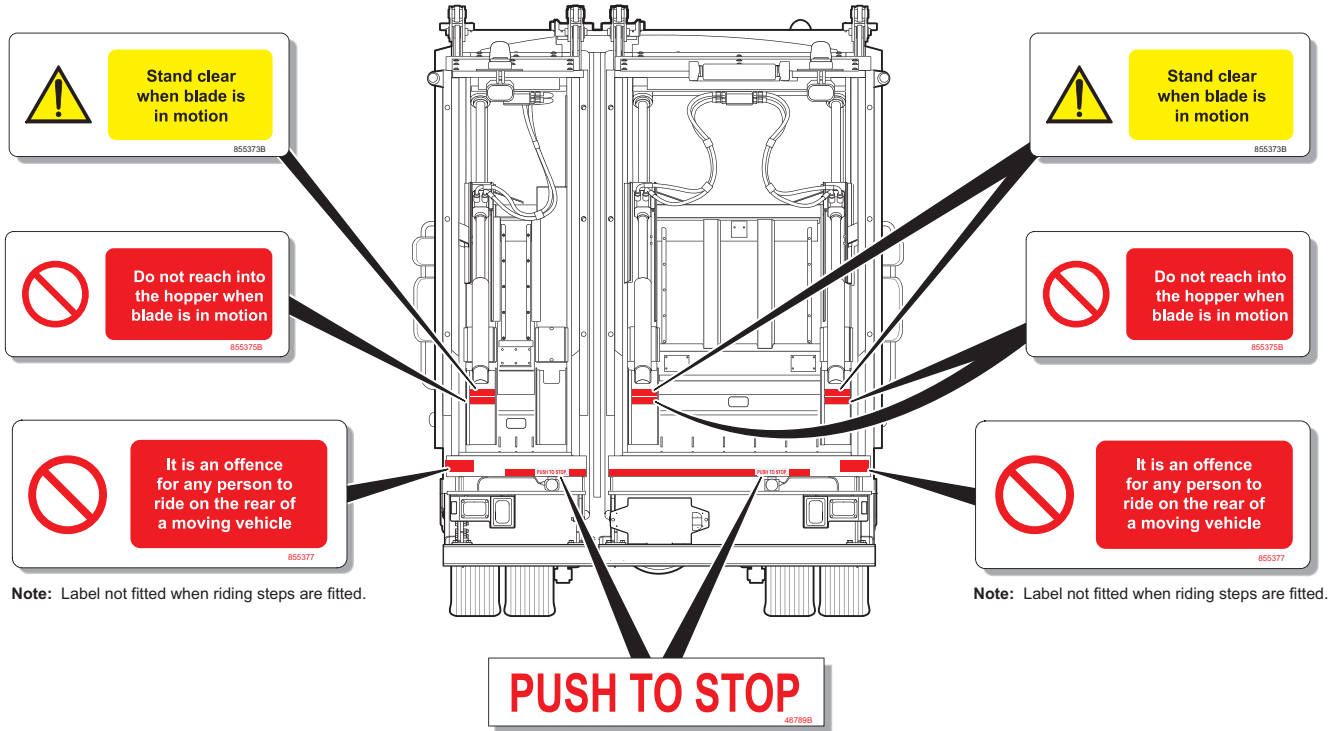

3844-OT1-D-GB-G2

Fig. 3-5 Warning labels; rear of collection bodywork

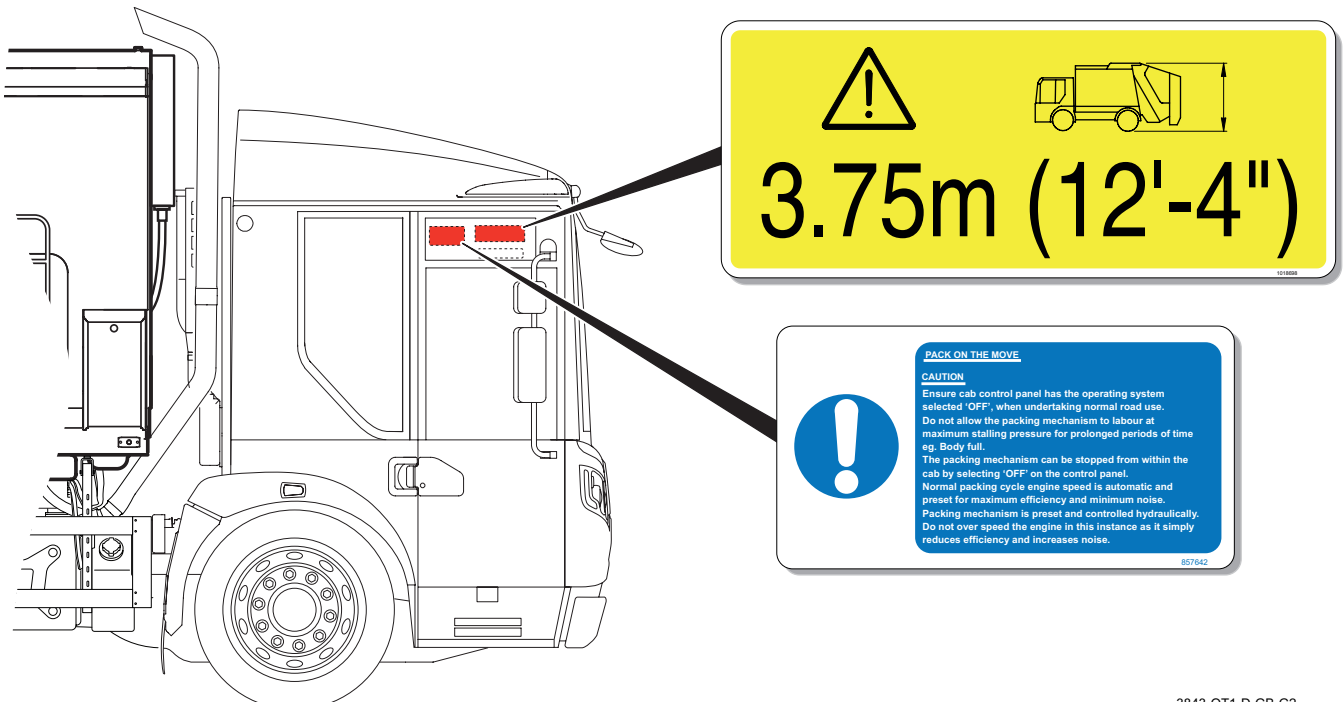

3843-OT1-D-GB-G2

Fig. 3-6 Warning labels; cab